

## Installing PCmaxx Time Clock on Togo Pads

1. On the tablet go to control panel > user accounts and family safety > user accounts and then click on Change User Account settings. Slide Ruler down to never notify. Restart Tablet.




2. Copy PCMAXX Setup folder onto Device


3. Install SQL server 2008R2 express




4. Click Install new package and click on all defaults until you get to the screen at step 5.

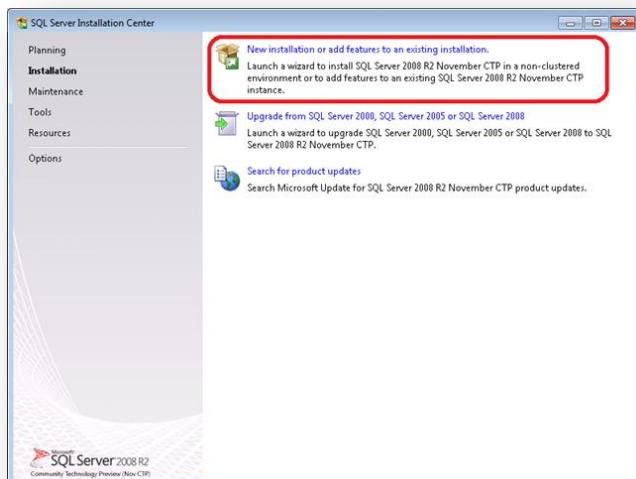


## 5. Change SQLEXPRESS to PCMAXX

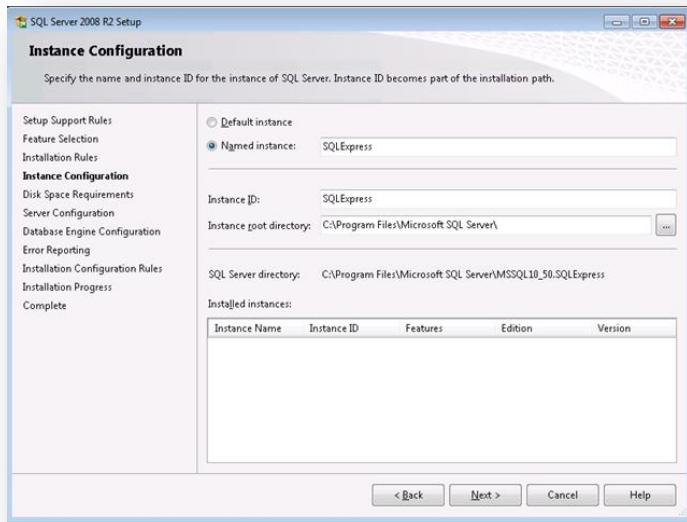


## 6. Change SQL server browser from disabled to automatic.

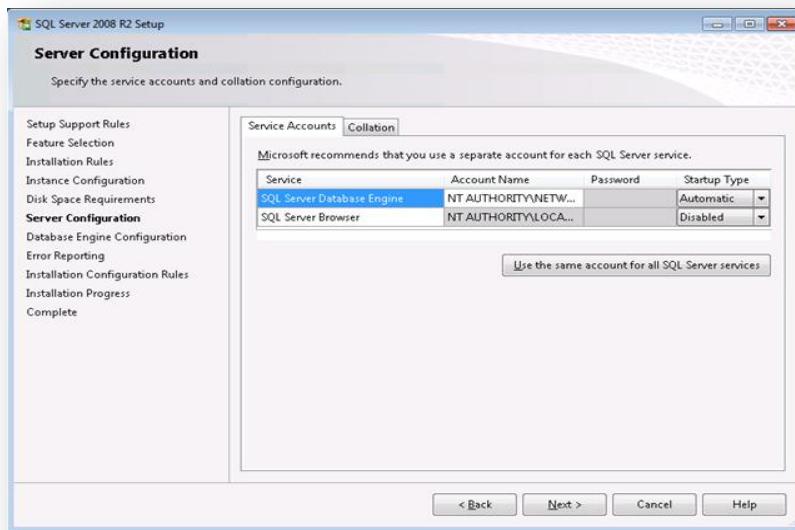


## 7. Change Authentication Mode to Mixed Mode and enter password datamaxx.

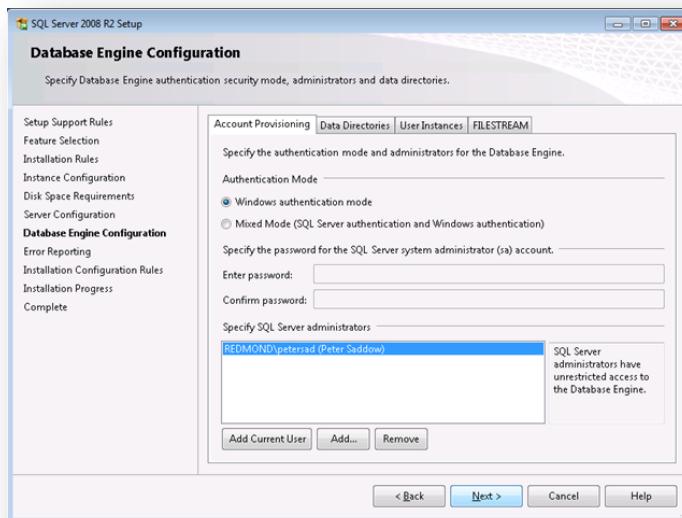


8. Close when you are finished
  
9. Log into the SQL server Management Studio to Create the database and use name and Password.
  - A. Click on Windows logo then all programs > Microsoft SQL Server 2008 R2 > SQLServer Management Studio
  - B. Log in using Window Authentication
  - C. Right Click on Database and Click on New Database

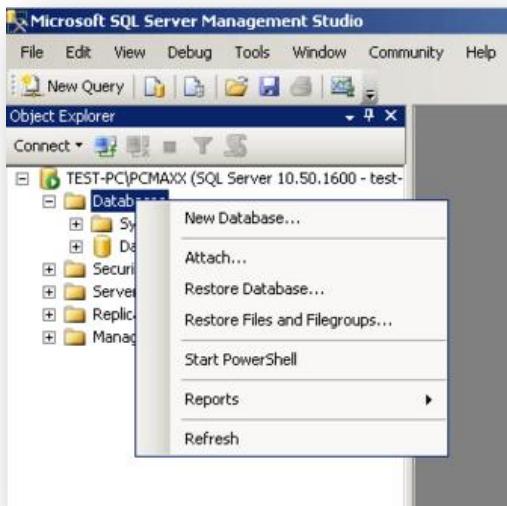


- D. Name the database datamaxx > click OK
- E. Double Click on the CreateDatabaseTables File in the PCMaxx setup folder.
- F. It will install the script in a new query window on the SQL Management studio > click Execute (this will take a few minutes to run. There will be a Successful prompt when you are finished.

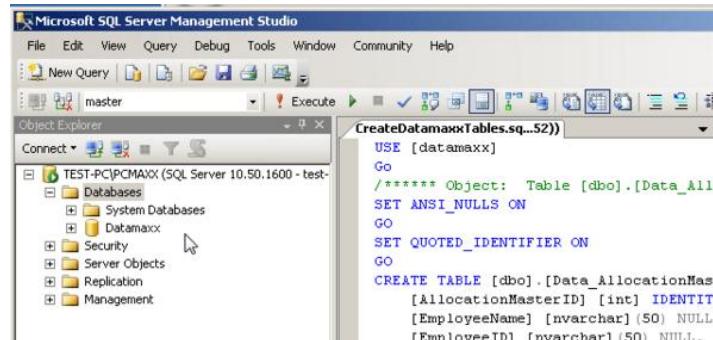


- G. Next Create a New Security Log in . In the Management Studio Right click on Security > new > Login ...

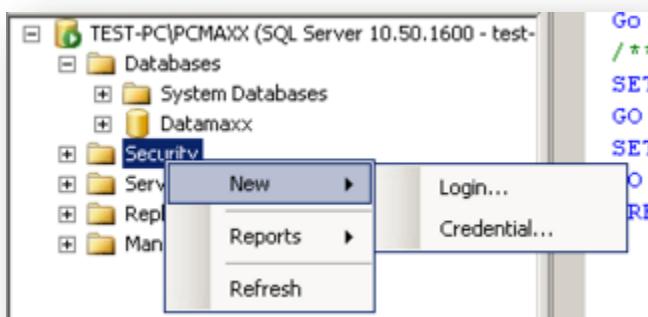

- H. Make Login name datamaxx > tick SQL server Authentication
- I. Add password datamaxx and confirm
- J. Uncheck Enforce Password Policy
- K. Change Default database to datamaxx

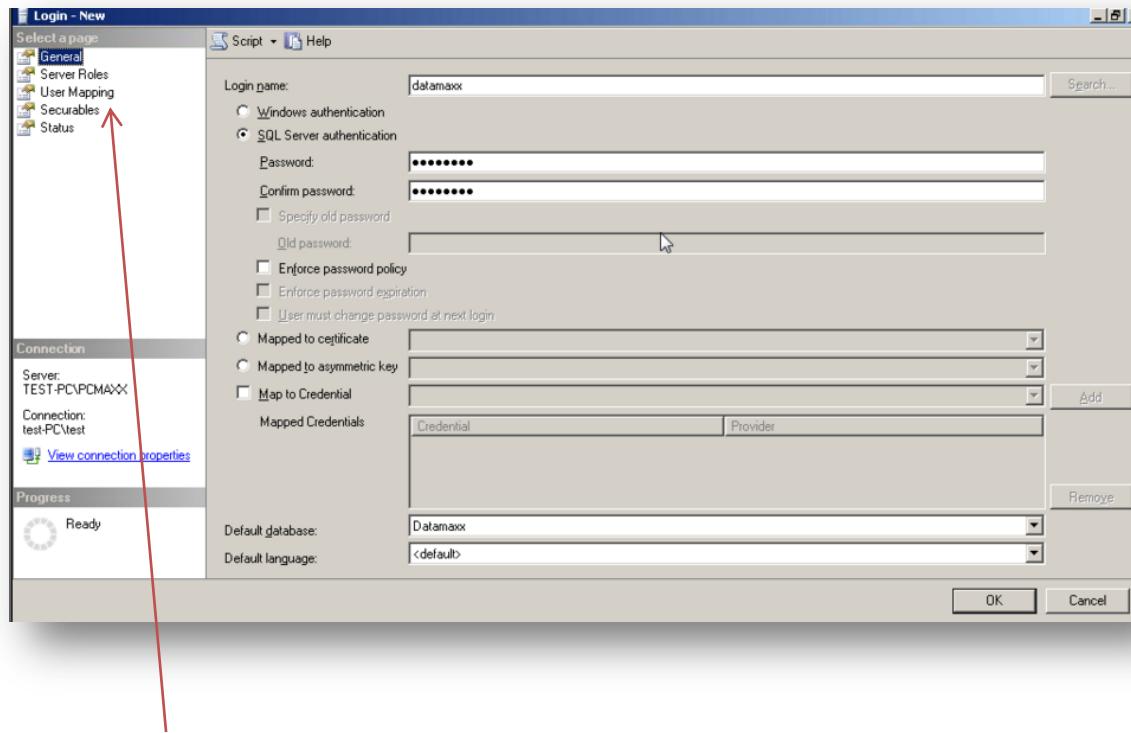


- L. Click on User Mapping then check the datamaxx database map box and check db\_owner at the bottom

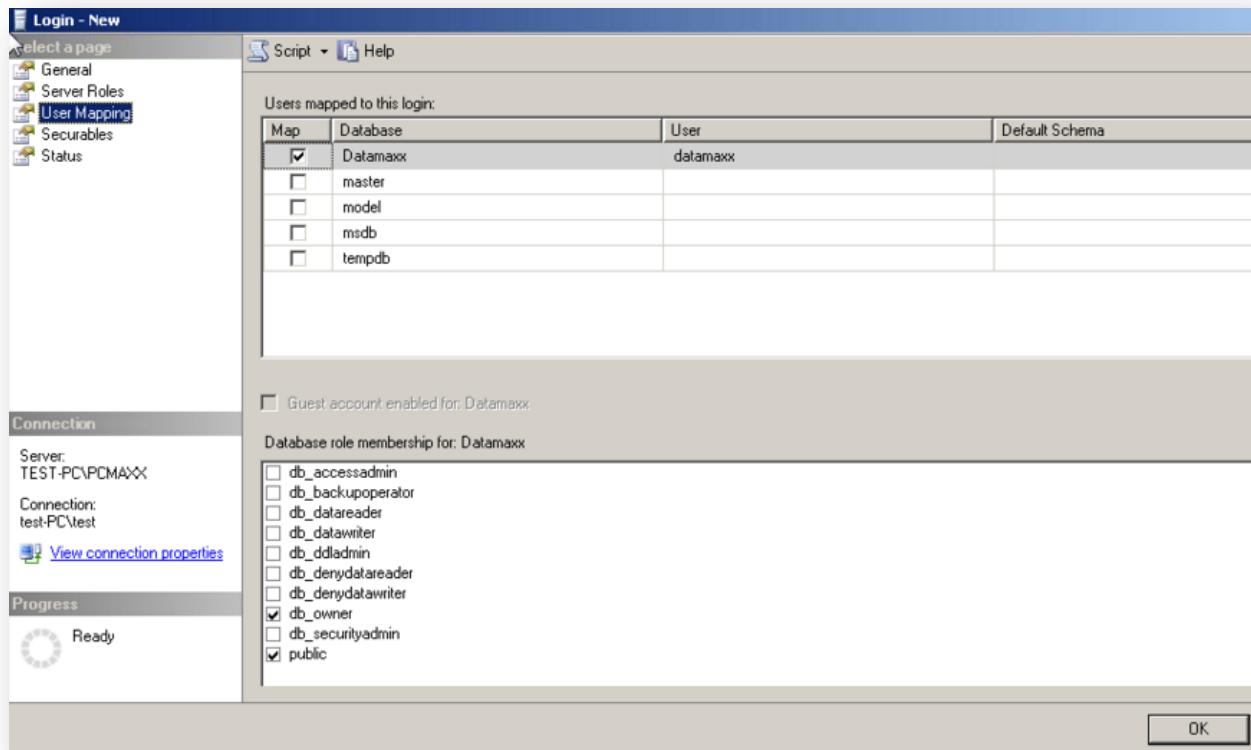

- M. Click OK


10. Create the ODBC link to the SQL database

- A. Click on Windows logo and type ODBC into search program and files and choose Data Sources (ODBC)
- B. Choose Add... the SQL server and click Finish

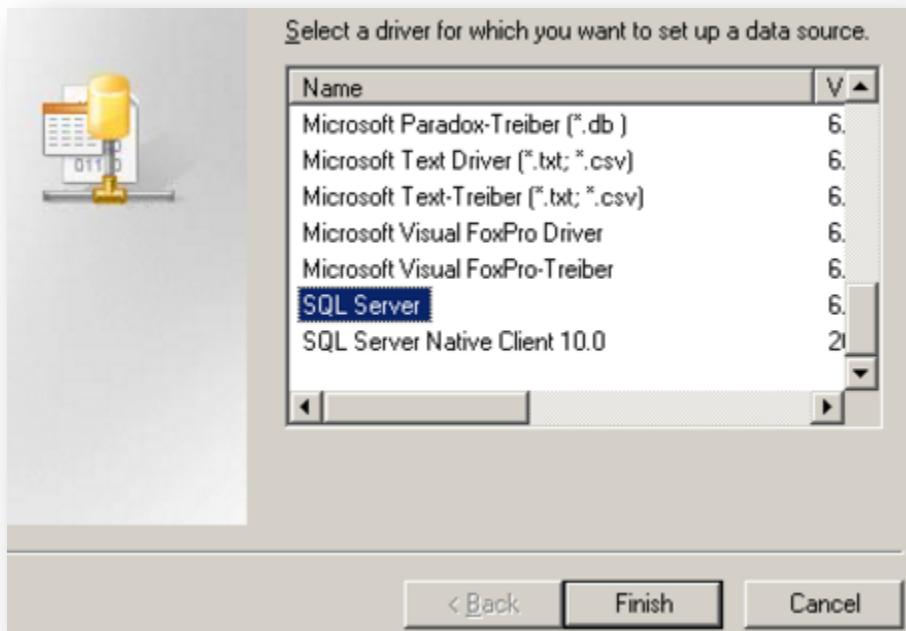


- C. Name the connection datamaxx > description = datamaxx > use the drop down to choose the server, click NEXT>

- D. Choose the With SQL server authentication and type Login ID = datamaxx Paswword = datamaxx

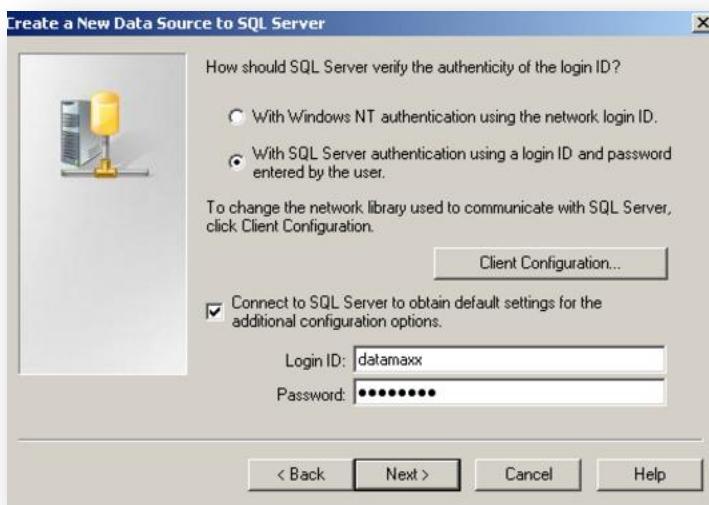

- E. Click Next > Finish > OK

- F. Open up the sql.dmd in C:\program files\PCMaxx with notepad. Everything should be the same as below except add your pc name in the ( ). For example if the pc name is datamaxx it would be datamaxx-  
pc\SQLEXPRESS

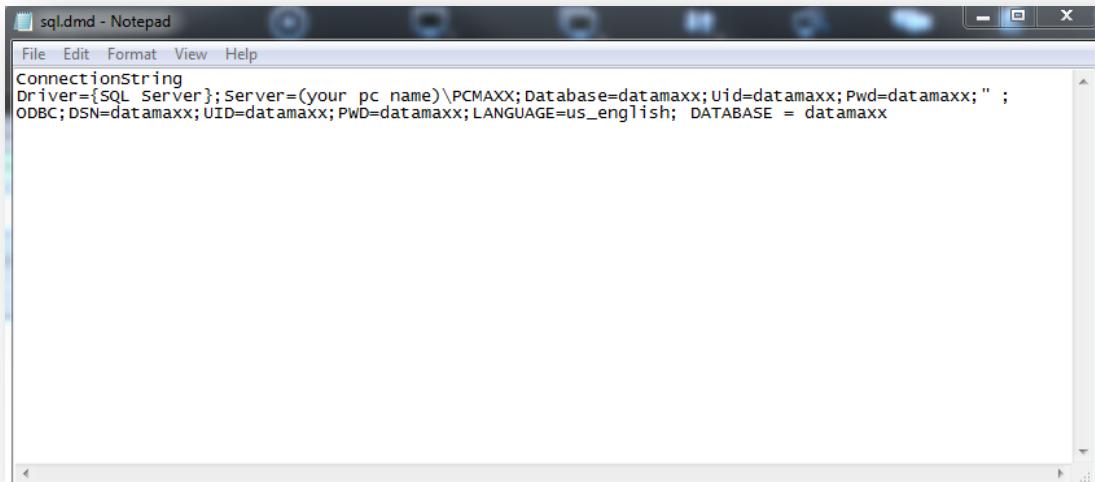


```
sql.dmd - Notepad
File Edit Format View Help
ConnectionString
Driver={SQL Server};Server=(your_pc_name)\PCMAXX;Database=datamaxx;Uid=datamaxx;Pwd=datamaxx;" ;
ODBC;DSN=datamaxx;UID=datamaxx;PWD=datamaxx;LANGUAGE=us_english; DATABASE = datamaxx
```

- G. Save the changes


11. Install PCMaxx Setup ( use all default settings) say "no to all" when it ask if you want to replace dll's

12. After PCMAXX is installed copy the highlighted files in the PCMaxxUpdate folder into c:\program files\pcmaxx

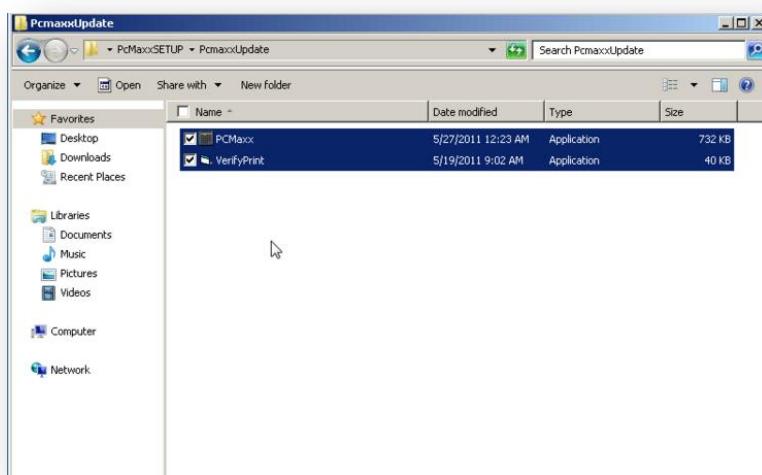


13. After copying and pasting them Dbl click on the verify print file in **c:\program files\pcmaxx** ( nothing will appear to happen but this will register the file)

14. Then register the fplib.ocx file with regserver32.exe. Go to start type in Run in the search box. Tap Run and enter this line in the command prompt and hit ok regsvr32 "C:\Program Files (x86)\PCMaxx\fplib.ocx" a box should appear saying that it was successful.

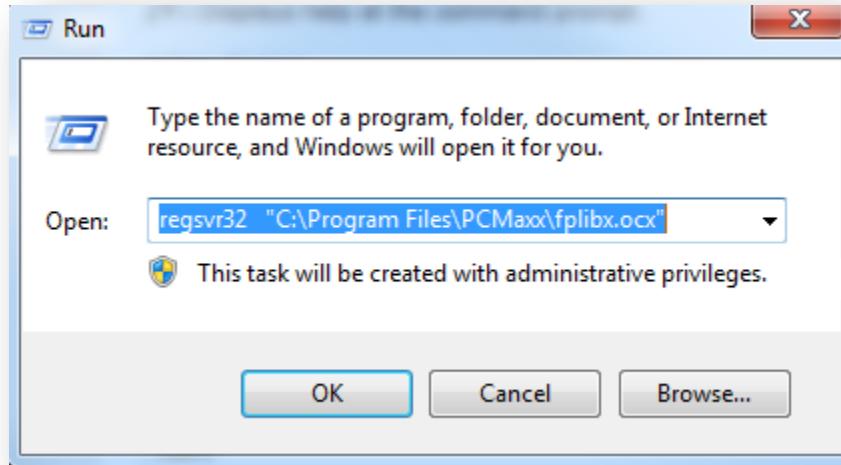

15. Plug in the finger print reader. In the PcMaxx Setup Folder open the sgdrinstallv65bit32 folder and dbl click on the Setup File

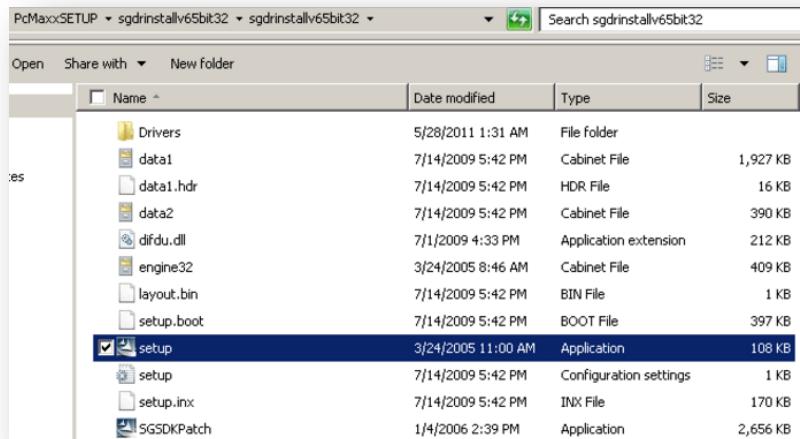


16. Click Next > Next > Finish

17. Copy the Folder PCMaxx2webServiceInterface form PCmaxxSetup folder into C:\program files\PCMaxx


18. After copying open C:\program files\PCMaxx\ PCMaxx2webServiceInterface folder and right click on the DataMaxx.Interface.PCMAXX file and send to Desktop Shortcut. Rename the shortcut to PCMaxxSync

19. Dbl click on the short cut to open and click on settings. Add the proper settings and hit Test for both the remote server and your local PC

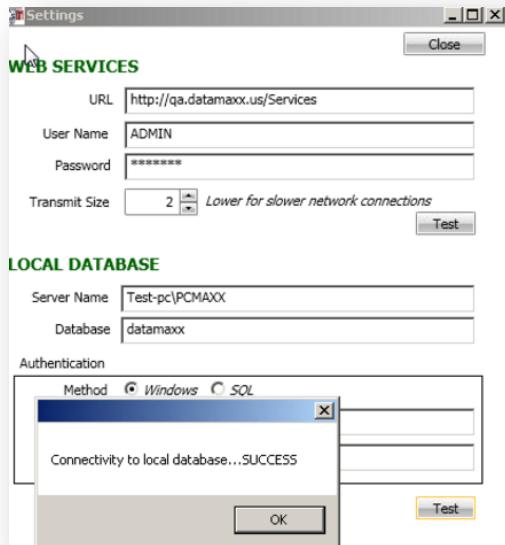


20. Open PCMAXX ( a desktop icon should be made for this as well)


- Click on Manager UN=admin PW=1234
- Click on Program Setup
- Click on Data File and connect to the sql.dmd in C:\program files\PCMaxx

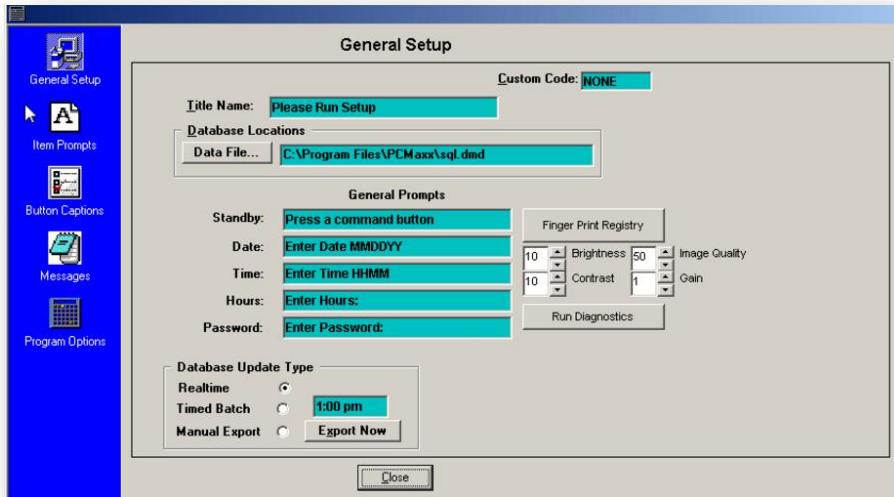


- D. Plug in the fingerprint reader to test click on finger print Registry. If the drivers were successfully installed it should look like this. Click the X to exit form . Enter employee ID 1234 and register a fingerprint.

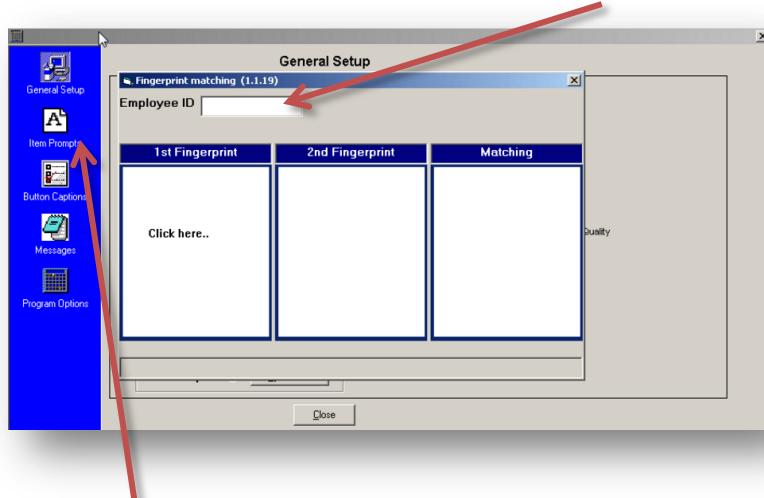

- E. Click on Item prompts and check enter Badge ID Enable and use Secugen Fingerprint Validation.

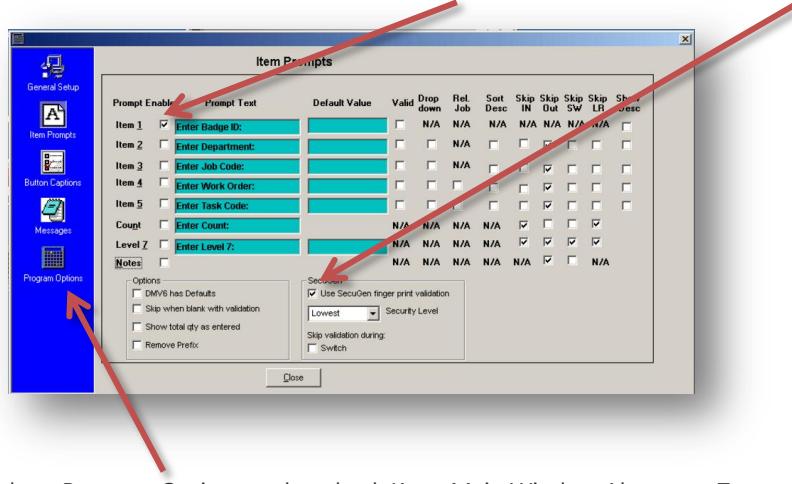

- F. Click on Program Options and uncheck Keep Main Window Always on Top and Check Moveable, Minimize, and Sizeable. (the others can be enabled by the customer)

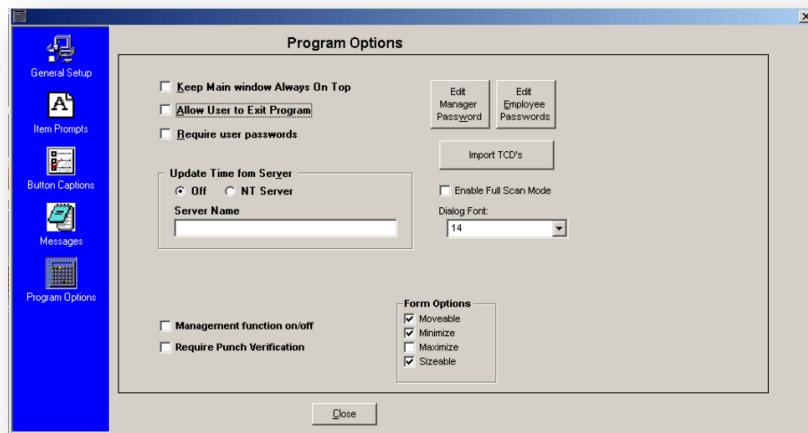

- G. Close the Program Setup  
 H. Exit PCMaxx and Reopen it  
 I. With the finger print Reader Still plugged in Click start > enter ID 1234> click enter > place finger on the reader. If there are no errors your set up is Complete.

